
Thunderbird Headquarters



4020 Pike Lane Concord, CA 94520 925-825-9550 Local Orders/Information 800-227-2174 Toll Free Orders

925-689-1771 Local Fax 800-964-1957 Toll Free Fax

1961-62 Body Side Molding Instruction Sheet

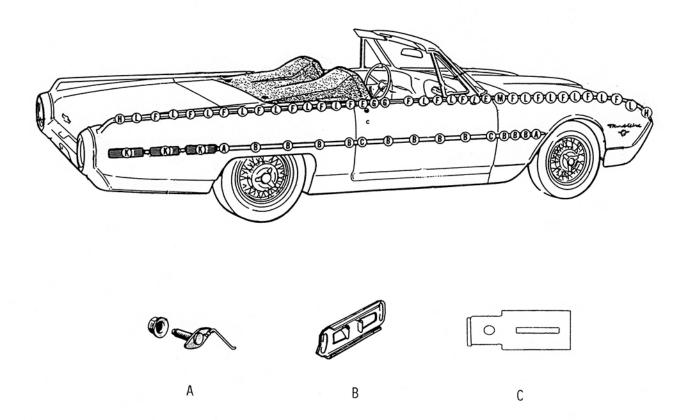

It is recommended that you mark the side of your car with a chalk line. You should key off of the center of the rear 1/4 panel bars on a 1962, and on a 1961 key off of the center between the second and third spear on the 1/4 panel. You will need a drill and drill bits to drill the holes for the clips.