

## **INSTALLATION INSTRUCTIONS FOR:**

**C5SZ-14A303-AD Stop lamp adapter for 1965 - 1966 Thunderbirds built before 11/17/65**

### **INTRODUCTION:**

This adapter is used to adapt a C6SZ-13A366-AS sequential system for use in an early 1965-1966 Thunderbird.

### **INSTALLATION:**

1. Disconnect the battery for safety. Locate the factory sequential system mounted on the rubber pad behind the back seat on the passenger side (Figure 1). Remove the spare tire for access.
2. Remove the original 13A573 stop lamp harness from the 13A399 harness and the sequential system. Plug in the 14A303 adapter harness 3-pin connector into the 13A399 harness and attach the black ground. Then plug the 4-pin connector into the stop lamp relay connector on the C6SZ-13A366-AS system unit. (Figure 2)
4. Reconnect the battery and test the stop lamps before driving the vehicle.

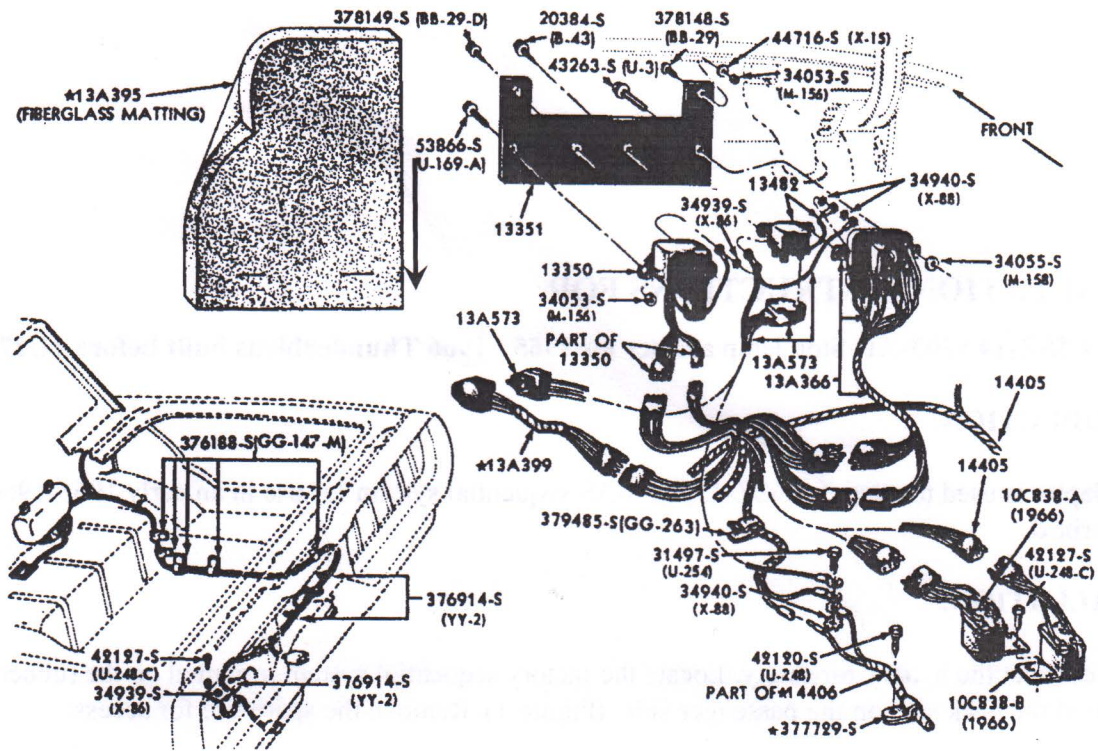


Figure 1. Turn Signal Sequencer Location - 1965 -1966 Thunderbirds built before 11/17/65

Connect to 13A399 stop lamp harness

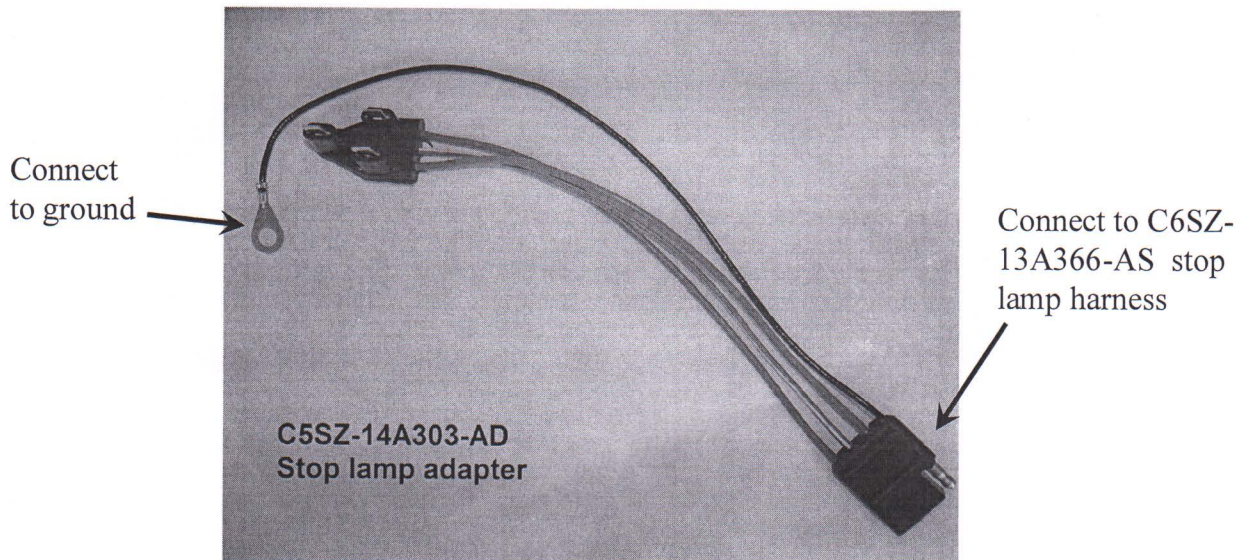


Figure 2. Stop lamp adapter wire connections - 1965 and early 1966